



# Vacuum Gripper Unit for Collaborative Robots

**YASKAWA Electric Corporation**  
collaborative robot  
MOTOMAN-HC10DT compliant



**ZXP7□11-X1□**

P-EU20-37-UK

# Vacuum Gripper Unit

## for Collaborative Robots

YASKAWA Electric Corporation collaborative robot

### MOTOMAN-HC10DT compliant


- \* It cannot be mounted on the MOTOMAN-HC10.
- \* It can be used with robot specifications with air piping.

Can be operated simply by connecting 1 compressed air supply tube and the built-in cable for electric wiring

- Integrated vacuum ejector, air supply/release valve, pressure switch, and pads
- As the air piping and electric wiring built into the robot are used, no external wiring or piping is required.
- No interference with workpieces or workers
- Features a rounded appearance without corners
- A wide variety of pad variations are available to support a wide range of workpieces.



#### Details of internal parts

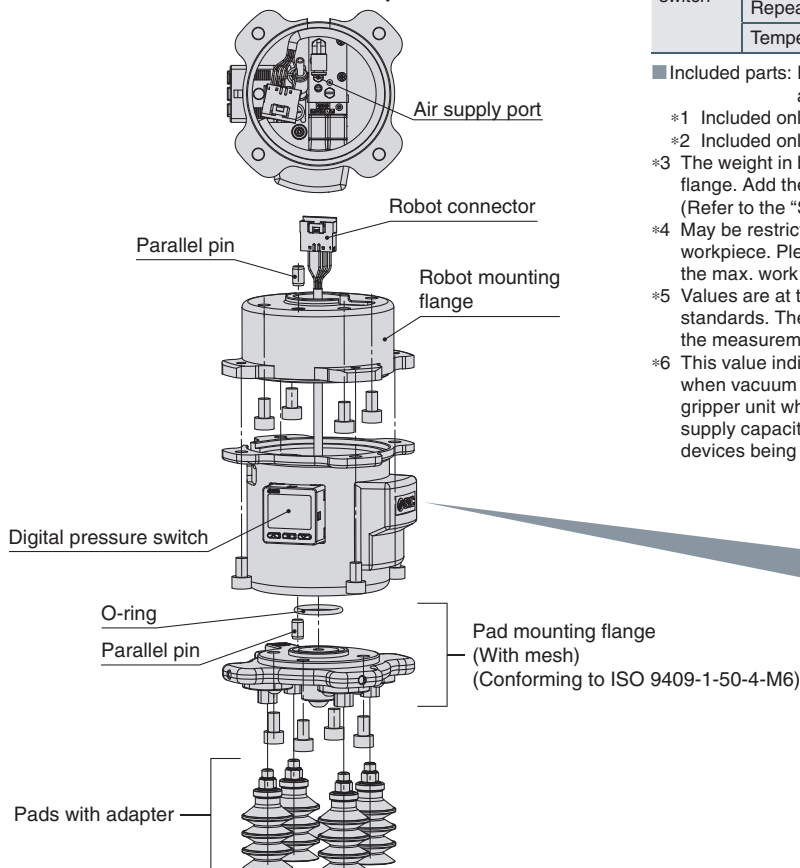


#### Specifications

Common	Applicable fluid	Air
	Operating temperature range [°C]	5 to 50
	Weight [g] <sup>*3</sup>	895 (671)
	Max. work load [kg] <sup>*4</sup>	7
	Air pressure supply (P) port	Built-in One-touch fittings (Ø 4)
	Power supply voltage [V]	24 VDC ±10 %
Vacuum ejector	Max. vacuum pressure [kPa] <sup>*5</sup>	-84
	Suction flow rate [l/min (ANR)] <sup>*5</sup>	17
	Air consumption [l/min (ANR)] <sup>*5</sup>	57
	Supply pressure range [MPa]	0.3 to 0.55
	Standard supply pressure [MPa] <sup>*6</sup>	0.5
Pressure switch	Rated pressure range [kPa]	0 to -101
	Display accuracy	±2 % F.S. ±1 digit (Ambient temperature of 25 ±3°C)
	Repeatability	±0.2 % F.S. ±1 digit
	Temperature characteristics	±2 % F.S. (25°C conversion)

■ Included parts: Robot mounting flange, Parallel pin, Mounting bolt, Pads with adapter<sup>\*1</sup>, Plug<sup>\*2</sup>

- \*1 Included only with pads
- \*2 Included only for the ZXP7A
- \*3 The weight in brackets refers to the weight of the product without a pad mounting flange. Add the weight of the suction pads with adapter for the weight with pads. (Refer to the "Suction Pad Part Numbers and Weight" on page 3.)
- \*4 May be restricted depending on the pad diameter, mounting orientation, or workpiece. Please use within the max. work load. Suction and transfer exceeding the max. work load may result in reduced vacuum pressure due to air leakage.
- \*5 Values are at the standard supply pressure and based on SMC's measurement standards. They depend on atmospheric pressure (weather, altitude, etc.) and the measurement method.
- \*6 This value indicates the pressure right before the air pressure supply (P) port when vacuum is generated. The pressure right before the P port of the vacuum gripper unit when vacuum is generated may fall below 0.5 MPa due to the air supply capacity, piping size, and the amount of air being consumed by other devices being operated simultaneously.

#### Details of internal parts

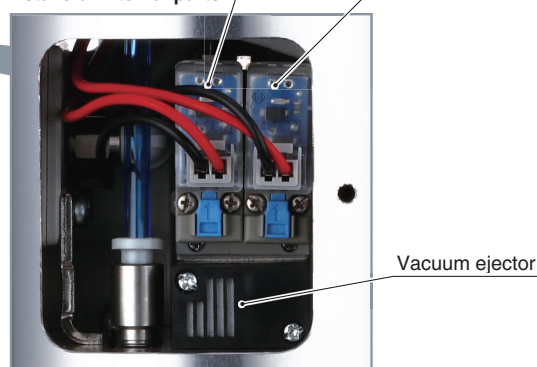

# Adsorption Unit Variations

The number of pads can be changed.



1 pad

2 pads

4 pads

The pad type can be changed. (For details on selectable pads, refer to "How to Order.")



Flat (Ø 8), Silicone rubber

Bellows (Ø 20), NBR

Thin flat (Ø 16), NBR

Flat (Ø 32), Silicone rubber

Flat (Ø 32), Urethane rubber



Ø 32, 2.5-stage, Silicone rubber

Ø 25, 5.5-stage, Silicone rubber


Ø 25, 5.5-stage, Silicone rubber  
With vacuum saving valve



Vacuum saving valve  
ZP2V Series  
(To be ordered separately)  
Applicable part no.: ZP2V-B6-05


\* The silicone material is compliant with the FDA (U.S. Food and Drug Administration) regulation 21CFR§177.

■ The pad pitch can be changed.

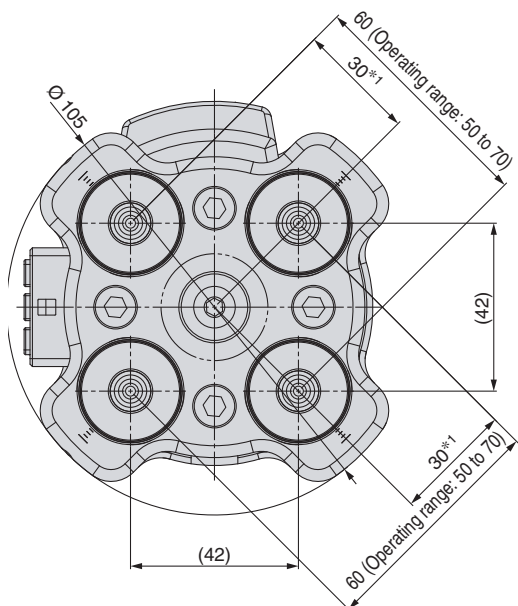

\*1 Operating range: 25 to 35 (When a pad is mounted in the centre)  
As interference between pads may occur depending on the pad diameter, select the pad diameter according to the pitch to be used.

## How to Order

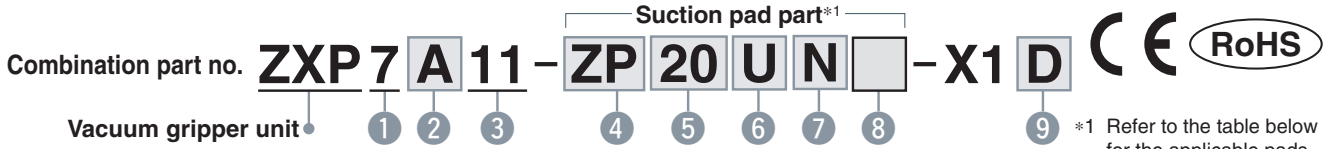


### 1 Unit size

Symbol	Size
7	75 mm

### 2 Pad mounting flange shape

Symbol	Flange shape
A	With flange (42 mm x 42 mm)
N	Without flange

With flange Without flange

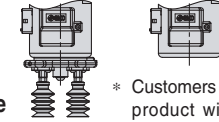

\* Customers selecting the product without a pad mounting flange will be required to produce a flange that matches the mounting dimensions on their own.

### 6 Pad form

Symbol	Pad form
U	Flat
C	Flat with rib
B	Bellows
UT	Thin flat
J	Multistage bellows
JT2	2.5-stage bellows
JT5	5.5-stage bellows
—	Without pad

### 7 Pad material

Symbol	Material
N	NBR
S	Silicone rubber (White)*2
U	Urethane rubber
F	FKM
SF	Silicone rubber (Blue)*2
—	Without pad

\*2 The silicone material is compliant with the FDA (U.S. Food and Drug Administration) regulation 21CFR§177.

### 3 Compatible robot manufacturer

Symbol	Robot manufacturer
11	YASKAWA Electric Corporation: MOTOMAN-HC10DT

### 4 Pad series

Symbol	Pad series
ZP	Basic
ZP3P	Bellows type for film packaging workpieces
—	Without pad

### 5 Pad diameter

Symbol	Pad diameter	Symbol	Pad diameter
08	Ø 8	25	Ø 25
10	Ø 10	B25	Ø 25
13	Ø 13	B30	Ø 30
16	Ø 16	32	Ø 32
20	Ø 20	—	Without pad

### 9 Pressure switch output specifications/Unit

Symbol	Output/Unit
—	NPN/With unit switching function
A	NPN/SI unit only*4
B	NPN/With unit switching function (Initial value psi)
C	PNP/With unit switching function
D	PNP/SI unit only*4
E	PNP/With unit switching function (Initial value psi)

\*4 Fixed unit: kPa, MPa

### 8 Attachment\*3

Symbol	Attachment
—	With (guide) attachment
M	With mesh attachment

\*3 Only applicable to the pad form "JT□." Note that "M" applies only to pad form: JT2.

\*1

## Suction Pad Part Numbers and Weight

Part No. **ZXP7(A,N)11-**      **-X1**

4 5 6 7 8

### Applicable pads

4	5	6	7	8
Pad series	Pad diameter	Pad form	Pad material	Attachment
ZP	08	U	□	
ZP	08	B	□	
ZP	10	UT	□	
ZP	13	UT	□	
ZP	16	UT	□	
ZP	10	U	□	
ZP	13	U	□	
ZP	16	U	□	
ZP	20	U	□	
ZP	25	U	□	
ZP	32	U	□	
ZP	10	C	□	
ZP	13	C	□	
ZP	16	C	□	
ZP	20	C	□	
ZP	25	C	□	
ZP	32	C	□	
ZP	10	B	□	
ZP	13	B	□	
ZP	16	B	□	
ZP	20	B	□	
ZP	25	B	□	
ZP	32	B	□	
ZP	20	UT	□	
ZP	16	J	□	
ZP	B25	J	□	
ZP	B30	J	□	
ZP3P	20	JT2	SF	
ZP3P	20	JT2	SF	M
ZP3P	32	JT2	SF	
ZP3P	32	JT2	SF	M
ZP3P	20	JT5	SF	
ZP3P	25	JT5	SF	
ZP3P	32	JT5	SF	

### Pad part numbers


Part no.	Weight by pad material (g/pad)				Adapter unit Vacuum inlet: (Male thread M6 x 1)	Pad unit
	N (NBR)	S/SF (Silicone)	U (Urethane)	F (FKM)		
ZPT08U□-A6	4	4	4	4	ZPT1-A6	ZP08U□
ZPT08B□-A6	4	4	4	4		ZP08B□
ZPT10UT□-A6	4	4	4	4		ZP10UT□
ZPT13UT□-A6	4	4	4	4		ZP13UT□
ZPT16UT□-A6	4	4	4	4		ZP16UT□
ZPG10U□-7A-X2	7	7	7	7		ZPT2-7A-X2
ZPG13U□-7A-X2	7	7	7	8	ZP13U□	
ZPG16U□-7A-X2	7	7	7	8	ZP16U□	
ZPG20U□-7A-X2	9	10	10	10	ZP20U□	
ZPG25U□-7A-X2	10	10	10	11	ZP25U□	
ZPG32U□-7A-X2	10	11	11	12	ZP32U□	
ZPG10C□-7A-X2	7	7	7	7	ZPT2-7A-X2	ZP10C□
ZPG13C□-7A-X2	7	7	7	7		ZP13C□
ZPG16C□-7A-X2	7	7	7	8		ZP16C□
ZPG20C□-7A-X2	9	10	10	11		ZP20C□
ZPG25C□-7A-X2	10	10	10	11		ZP25C□
ZPG32C□-7A-X2	10	11	11	12		ZP32C□
ZPG10B□-7A-X2	7	7	7	8	ZPT2-7A-X2	ZP10B□
ZPG13B□-7A-X2	7	8	8	8		ZP13B□
ZPG16B□-7A-X2	8	8	8	9		ZP16B□
ZPG20B□-7A-X2	11	11	11	13		ZP20B□
ZPG25B□-7A-X2	11	12	12	14		ZP25B□
ZPG32B□-7A-X2	14	15	15	18		ZP32B□
ZPG20UT□-7A-X2	4	4	4	4	ZPT1-A6	ZP2-20UT□
ZPG16J□-7A-X2	8	8	8	9	ZPT2-7A-X2	ZP2-16J□
ZPGB25J□-7A-X2	14	15	15	18	ZPT3-7A-X2	ZP2-B25J□
ZPGB30J□-7A-X2	18	19	19	25		ZP2-B30J□
ZP3PG20JT2SF-7A-X2	—	21	—	—		ZP3PA-T1JT-7A-X2
ZP3PG20JT2SF-M-7A-X2	—	21	—	—	ZP3P-20JT2SF-WM	
ZP3PG32JT2SF-7A-X2	—	48	—	—	ZP3PA-T2JT-7A-X2	
ZP3PG32JT2SF-M-7A-X2	—	48	—	—		ZP3P-32JT2SF-WM
ZP3PG20JT5SF-7A-X2	—	23	—	—		ZP3PA-T1JT-7A-X2
ZP3PG25JT5SF-7A-X2	—	25	—	—	ZP3P-25JT5SF-WG	
ZP3PG32JT5SF-7A-X2	—	54	—	—	ZP3PA-T2JT-7A-X2	

\* Refer to the **Web Catalogue** for details on suction pads.


Input the material symbol ("N," "S," "U," or "F") into the □ in the part number.

## Model Selection

### Exhaust Characteristics\*1

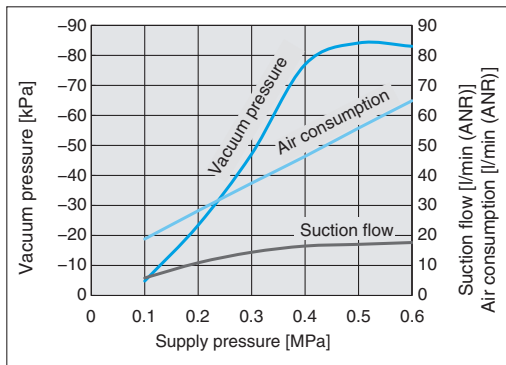


### Flow Rate Characteristics


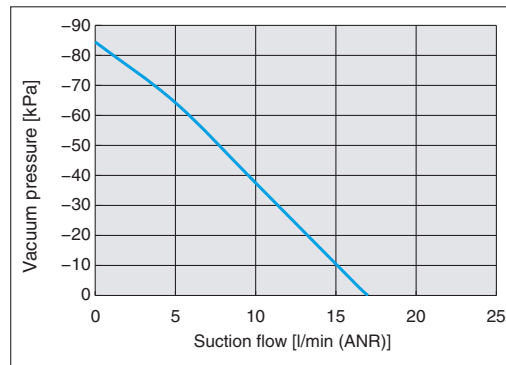


\*1 The exhaust characteristics are different when the vacuum-saving valve (ZP2V-B6-05) is mounted. For details, refer to "8.3 Suction pad precautions" in the operation manual.


## Dimensions

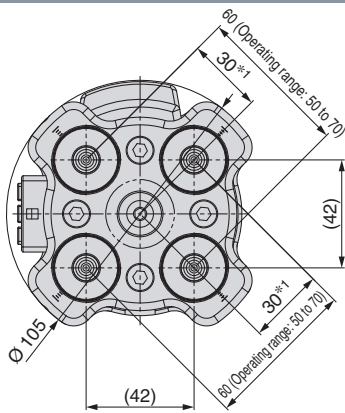


\* Operating range: 25 to 35 (When a pad is mounted in the centre)  
As interference between pads may occur depending on the pad diameter, select the pad diameter according to the pitch to be used.

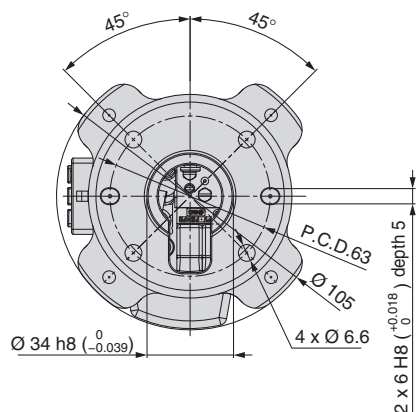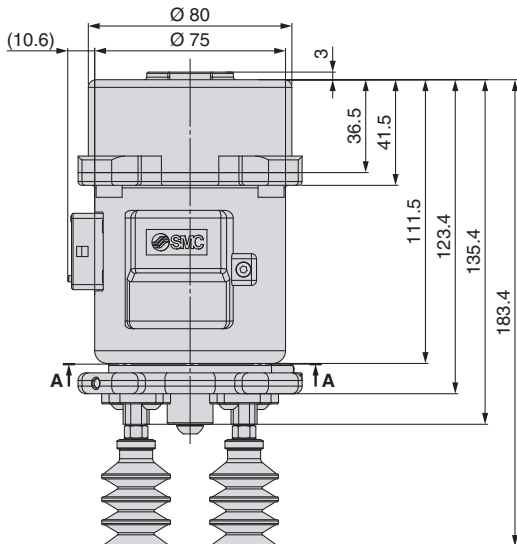

### Details of internal parts

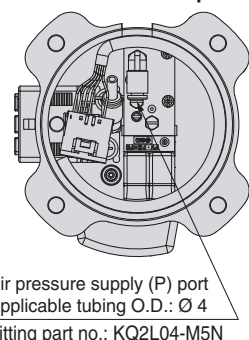


### Circuit diagram

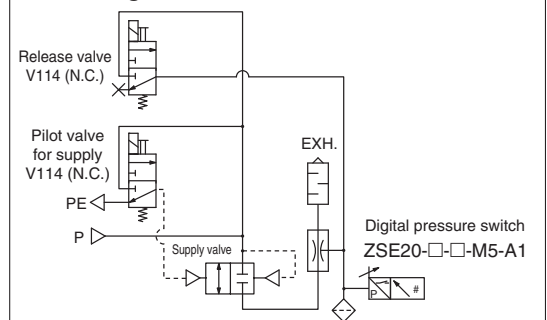

### Cup mounting flange


#### Replacement part number: ZXP7-PFL1-A-X1

(Refer to the figure below for items. Quantities are shown in the parentheses.)

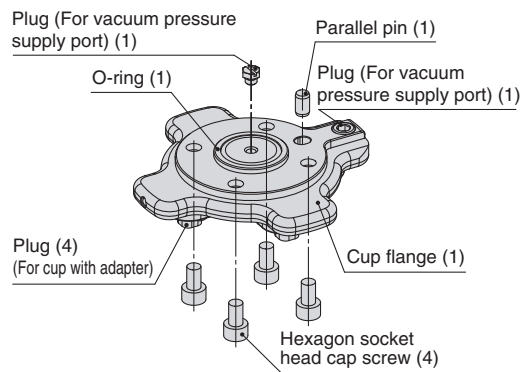

### Without cup mounting flange

Ø 31.5 H8 (+0.039, 0) depth 2.5

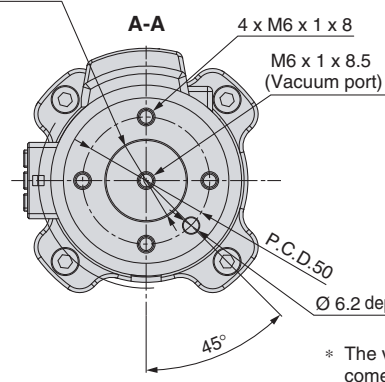

\* The vacuum port doesn't come with mesh.

\* The dimensions and mounting method described in this drawing (example) are for the following part number: ZXP7A11-ZPB25JS-X1



# ZXP7□11-X1□

## Specific Product Precautions

Be sure to read this before handling the products. For safety instructions and vacuum equipment precautions, refer to the “Handling Precautions for SMC Products” and the “Operation Manual” on the SMC website: <https://www.smc.eu>

### Handling

#### Caution

1. Strictly observe the precautions on vacuum equipment and safety when using the product. Additionally, select a pad size and material suitable to both the workpiece to be adsorbed and the atmosphere. Take safety measures so that any accident, such as the dropping of a workpiece, does not occur during adsorption transfer. For details, refer to the Web Catalogue.
2. Use the product within the specification range. Use exceeding the compressed air pressure or voltage may result in serious damage due to reduced product performance.
3. Exhaust air is released from the opening in the product. Therefore, this exhaust air opening must not be blocked or restricted.

### Mounting

#### Caution

1. For details on the mounting method, refer to the Operation Manual.
2. Tighten to the specified tightening torque. If the tightening torque is exceeded, the body and the mounting screws may break. However, insufficient torque may cause displacement of the body and loosening of the mounting screws.
3. Do not drop, strike, or apply excessive impact to this product. Doing so may result in damage to the internal parts of the body, solenoid valve, or pressure switch. In some cases, this damage may result in a malfunction.
4. Hold the body when handling the product. Do not pull excessively on the cable or pinch the cable when lifting the body. Failure to do so may result in damage to the solenoid valve or pressure sensor. In some cases, this damage may result in a failure or malfunction.
5. The bolts may loosen due to the operating conditions and environment. Be sure to conduct maintenance such as tightening the bolts periodically.

### Wiring

#### Caution

1. Do not wire while energising the product. Doing so may result in damage to the internal parts of the solenoid valve or pressure switch. In some cases, this damage may result in a malfunction.
2. Do not disassemble the cable or make any modifications, including additional machining. Doing so may cause human injury and/or an accident.

### Piping

#### Caution

1. **Flushing of the inside of the pipes**  
Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil, and other debris from inside the pipe.
2. **Tube attachment**
  - Take a tube having no flaws on its periphery and cut it off at a right angle. When cutting the tube, use tube cutters TK-1, 2, 3, 5, or 6. Do not use pliers, nippers, scissors, etc. If cutting is done with tools other than tube cutters, the tube may be cut diagonally or become flattened, etc., making a secure installation impossible, and causing problems such as the tube pulling out after installation or air leakage. Allow some extra length in the tube.
  - Grasp the tube and push it in slowly, inserting it securely all the way into the fitting.
  - After inserting the tube, pull on it lightly to confirm that it will not come out. If it is not installed securely all the way into the fitting, this can cause problems such as air leakage or the tube pulling out.
3. **Tube detachment**
  - Push in the release button sufficiently, pushing its collar equally around the circumference.
  - Pull out the tube while holding down the release button so that it does not come out. If the release button is not pressed down sufficiently, there will be increased bite on the tube and it will become more difficult to pull it out.
  - When the removed tube is to be used again, cut off the portion which has been chewed before reusing it. If the chewed portion of the tube is used as is, this can cause trouble such as air leakage or difficulty in removing the tube.
4. **Other Tube Brands**  
When using other than SMC brand tube, confirm that the following specifications are satisfied with respect to the tube outside diameter tolerance.
  - Nylon tube within  $\pm 0.1$  mm
  - Soft nylon tube within  $\pm 0.1$  mm
  - Polyurethane tube within  $\pm 0.15$  mm, within  $-0.2$  mmDo not use tube which do not meet these outside diameter tolerances. It may not be possible to connect them, or they may cause other trouble, such as air leakage or the tube pulling out after connection.
5. **Piping**
  - Do not apply unnecessary forces, such as twisting, pulling, moment loads, vibration, impact, etc., on fittings or tubing. This will cause damage to fittings and will crush, burst, or release tubing.
  - Do not lift the product by the piping after the tube is connected. Doing so may result in damage to the One-touch tube fitting. For details, refer to the “Handling Precautions for SMC Products” on the SMC website: <https://www.smc.eu>



## Vacuum Gripper Unit for Collaborative Robots

### **SMC Corporation**

**SMC CORPORATION**  
Akihabara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN  
Phone: 03-5207-8249 FAX: 03-5298-5362  
SMC CORPORATION All Rights Reserved

### **European Marketing Centre (EMC)**

Zuazobidea 14, 01015 Vitoria  
Tel: +34 945-184 100 Fax: +34 945-184 124  
URL <http://www.smc.eu>